

B535A Series

CAT.NO.	DESCRIPTION
A010	1 gang 1 way switch
A011	1 gang 2 way switch
A012	2 gang 1 way switch
A013	2 gang 2 way switch
A014	3 gang 1 way switch
A015	3 gang 2 way switch
A017	4 gang 2 way switch
A019	6 gang 2 way switch
A022	push switch "bell" switch
A022/PR	push switch "press" switch
A145/400	1 gang 2 way 400 watt
A061	20 amp DP switch with neon
A061/WH	20 amp DP switch with neon "Heater"
A092	13 amp 1 gang switched S.P
A093	13 amp 2 gang switched S.P + 2 earth terminals
A094	13 amp 1 gang switched DP
A096	13 amp 2 gang switched DP + 2 earth terminals
A120	15 amp 1 gang switched socket



CAT.NO.	DESCRIPTION
A130	1 gang 16 amp multifunction socket
A131B	2 gang 16 amp multifunction socket (NEW)
A088	2 gang 13amp multifunction switched socket & 16 amp socket & neon
A075	45amp cooker switch
A162	2 gang TV/FM flush
A161	1 gang TV flush isolated
A163	2 gang TV/FM flush isolated
A166	1 gang satellite flush
A166/2	2 gang satellite flush
A167	2 gang satellite flush (1x satellite socket, 1 x TV/FM socket)
A170	1 gang blank plate(3x3)
A171	2 gang blank plate(3x6)
A154	1 gang RJ11 (American) flush, screw terminals
A155	1 gang RJ45 (Computer / Data) flush (bakelite)
A156	2 gang RJ45 (Computer / Data) flush (bakelite)